



Approach the car and open it by scanning the QR CODE with your app or enter the vehicle's license plate in the app



Once inside the car, make sure that the keys are present in the glovebox compartment

While driving there are 3 possibilities to its use:



- **Sport gear** for lively driving with maximum performance and higher consumption
- **Normal gear** for standard driving and average consumption
- **ECO gear** to maximize energy savings (recommended choice)



STARTING THE VEHICLE

- press the brake pedal
- check that the gearbox is in the 'P' (park) position
- press and hold the on/off button **ENGINE START STOP** to start the vehicle



- when starting, the handbrake will release automatically, but if it remains engaged release it by raising the button lever



- press and hold the left side gear button and select one of the gear positions 'R' (reverse) or 'D/B' (start) **while keeping the brake pedal depressed**
- gently release the brake pedal and the vehicle will start moving.



P - parking
R - reverse
N - neutral
D/B - starting drive

VEHICLE RELEASE

- check that the gear is in the 'P' (park) position
- press and hold the on/off button **ENGINE START STOP** to turn the vehicle off
- the handbrake will be automatically engaged when the vehicle is released



RECHARGING THE VEHICLE

Car Sharing Roma cars are charged by our staff, but if you need to recharge on your own, use the **Enel X Card**, available in the glovebox compartment, which you will have to swipe over the reader of the chosen column.

Once at the charging station, connect the car through the power cable you will find in the luggage compartment. Once charging is complete, remove and replace the cable inside the car.

For assistance or information contact the Call Centre at 06 57003 (key 2) H24 - 7 days a week